



'Piranha Off Road products are not associated in any way with Toyota Australia or any of its related companies'

To Suit LANDCRUISER 200 SERIES
4.7L V8 PETROL

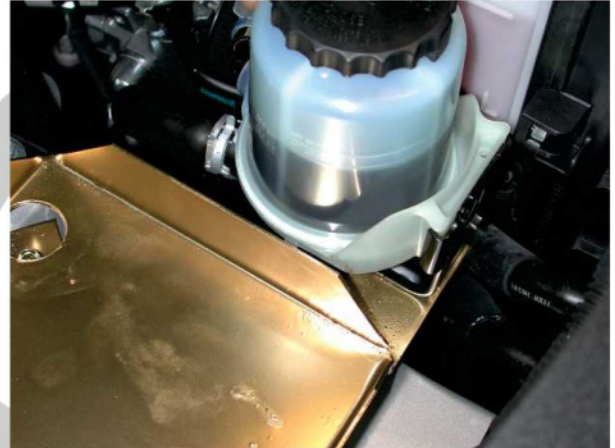

PART NUMBER	BT200PV8
APPROX FITTING TIME	1 Hour
MAX BATTERY SIZE	265mm L
MAX BATT WEIGHT	21Kg
CYCLE DUTY	
TRAY LOCATION	DSF

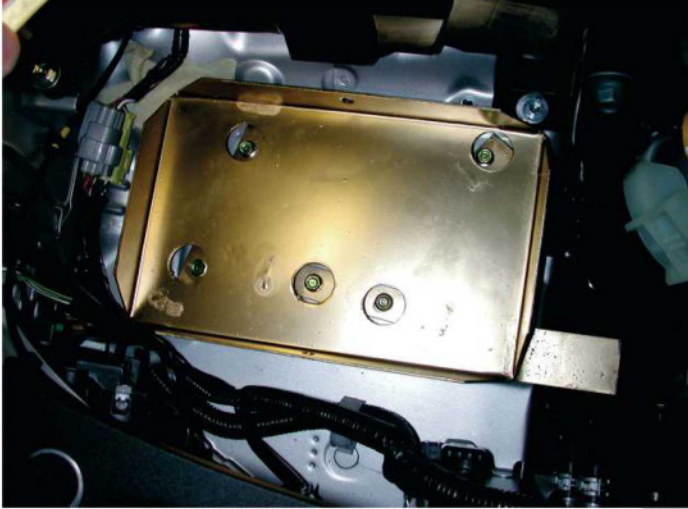

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 7 X M6 Hex
- 2 X M6 Nut
- 1 X Special Top Mount
- 2 X J Bolt

FITTING INSTRUCTIONS

This cradle fit drivers side front.

- Remove power steering reservoir from inner guard. (no need to disconnect.)
- Cut reservoir bracket to fit to tray.
- Bolt Tray to inner guard.
- Drill & bolt P.S reservoir bracket to tray & re-install reservoir.
- Remove two clips from plastic guard on radiator support panel.
- Put battery in & top onto battery which braces to radiator support under plastic guard.
- Re-install clips into plastic guard.

Ensure, before closing the bonnet that all items fitted have adequate clearance

RECOMMENDED ISOLATOR

**DBE140SF
or
DBE180-SX**