

PIRANHA OFFROAD PRODUCTS

'Piranha Off Road products are not associated in any way with GM HOLDEN Ltd or any of its related companies'

To Suit HOLDEN FRONTERA V6 PETROL



BTHFV6

PART NUMBER

BTHFV6

APPROX FITTING TIME

1 Hour

MAX BATTERY SIZE



235mm Long

RECOMMENDED TYPE

Cycle Duty

TRAY LOCATION

PSM

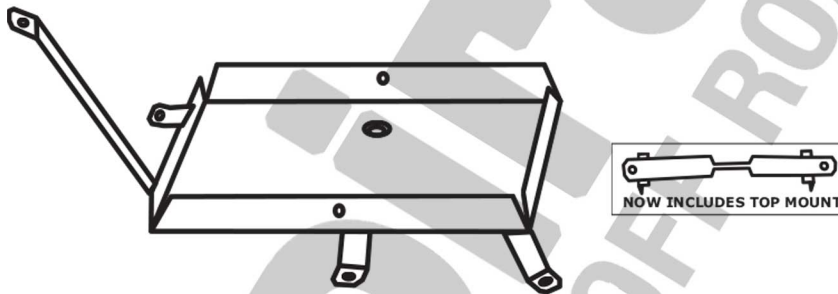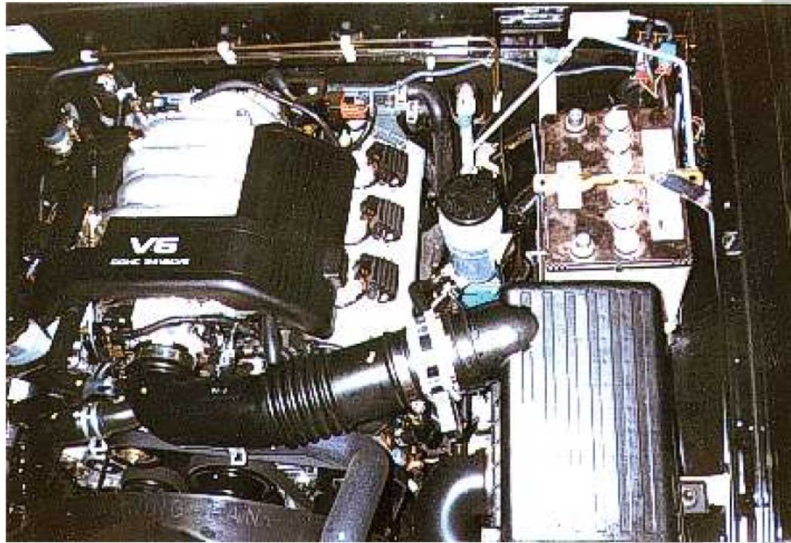

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 4 X M6 Bolts
- 4 X M6 Nuts
- 3 X Body Washers
- 2 X J Bolts
- 1 X Universal Top Mount

RECOMMENDED ISOLATOR

**DBE140SF
or
DBE180-SX**

CRADLE FITTING INSTRUCTIONS

The cradle fits passenger side middle.

Locates to existing bolts. Drill holes to guard and bolt as supplied. It is a tight fit. The air conditioning pipe and wiring loom require minor relocation.

Ensure, Before closing the bonnet that all items fitted have adequate clearance