

PIRANHA OFFROAD PRODUCTS



BTHRD07

'Piranha Off Road products are not associated in any way with GM HOLDEN Ltd or any of its related companies'

To Suit HOLDEN RODEO 2007
RA 3.0 VCDI NON ABS



PART NUMBER	BTHRD07
APPROX FITTING TIME	1 Hour
MAX BATTERY SIZE	235mm Long
RECOMMENDED TYPE	Cycle Duty
TRAY LOCATION	PSR

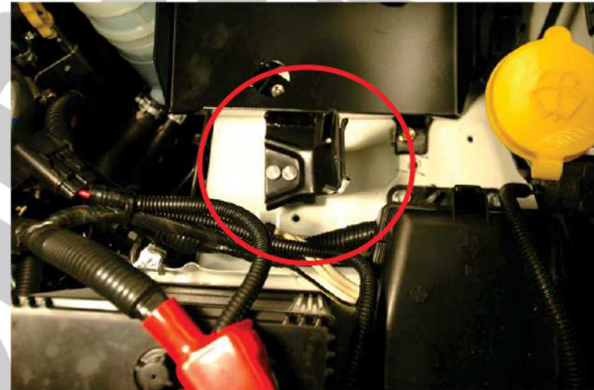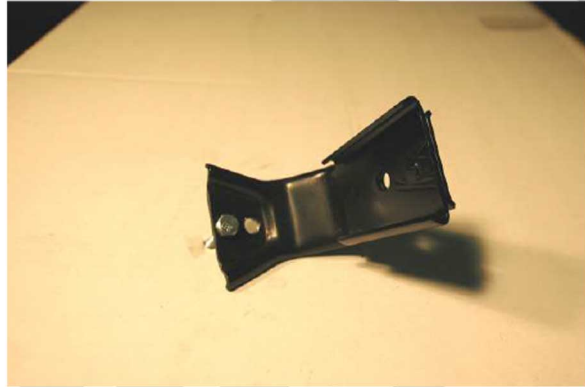

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 6 X M6 Bolts Hex
- 3 X M6 Nuts
- 2 X Weld Bolts
- 1 X Special Right angle Bracket
- 2 X J Bolts
- 1 X Standard Top Mount

RECOMMENDED ISOLATOR

DBE140SF
or
DBE180-SX

FITTING INSTRUCTIONS

The cradle fits passenger side rear.

Unbolt power steering Reservoir Bracket & Drill out two bottom spot welds. (Pic 2)

Remove Breather & drain plug from bracket & remove bracket. Mount power steering reservoir bracket to tray using M6 Nuts & weld bolts x 2. (Pic 4)

Place tray into position (A/C line may need tweaking) and bolt in 3 M6 Top bolts, then 4th M6 down the bottom of the inner guard.

Using right angle bracket re-attach breather & drain plug to inner guard. (Lines may need slight manipulating) (Pic 1)

NOTE: Can not be fitted to vehicle with ABS.

Ensure, Before closing the bonnet that all items fitted have adequate clearance