

PIRANHA OFFROAD PRODUCTS

'Piranha Off Road products are not associated in any way with GENERAL MOTORS or any of its related companies'

To Suit HUMMER H3
2005 to 2010
VORTEC 3.7Ltr - 5 Cylinder Petrol



BTHUM3

PART NUMBER

BTHUM3

APPROX FITTING TIME

2 Hours

MAX BATTERY SIZE



209mm Long

RECOMMENDED TYPE

Cycle Duty

TRAY LOCATION

PSR

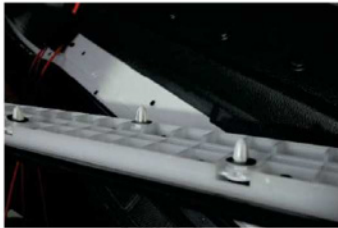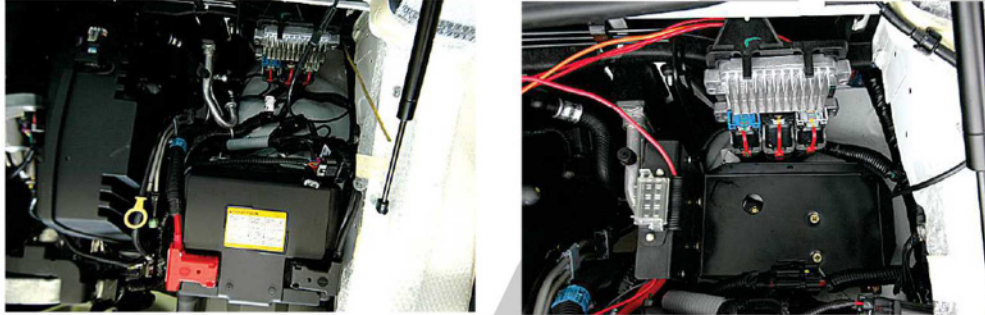

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 3 X M6 Bolts Hex
- 2 X M6 Bolts Countersunk
- 5 X M6 Washers
- 5 X M6 Nuts
- 2 X J Bolts
- 1 X Special Top Mount

RECOMMENDED ISOLATOR

DBE140SF
or
DBE180-SX

FITTING INSTRUCTIONS

The cradle fits passenger side rear

- Remove all clips & screws from wheel arch & flare (1)
- Flare slides anti clockwise on vehicle off clips
- Forward (2)
- Remove wheel arch & remove earth from behind battery on inner guard
- Re-locate wiring on inner guard to under computer and hard against battery.
- Place in tray & nut & bolt all holes.
- Bolt isolator & fuse box to tray (Advised to run wires in firewall before.)
- Fit battery to tray using narrow top mount

Ensure, Before closing the bonnet that all items fitted have adequate clearance