

# PIRANHA OFFROAD PRODUCTS



BTMBPV6

'Piranha Off Road products are not associated in any way with FORD Motor Co of Aust Ltd or any of its related companies'  
 'Piranha Off Road products are not associated in any way with MAZDA Australia Pty Ltd or any of its related companies'

## To Suit 1999 MAZDA BRAVO / FORD COURIER 4.0L V6 EFI PETROL



PART NUMBER	BTMBPV6
APPROX FITTING TIME	2 Hour
MAX BATTERY SIZE	235mm Long
RECOMMENDED TYPE	Cycle Duty
TRAY LOCATION	PSR

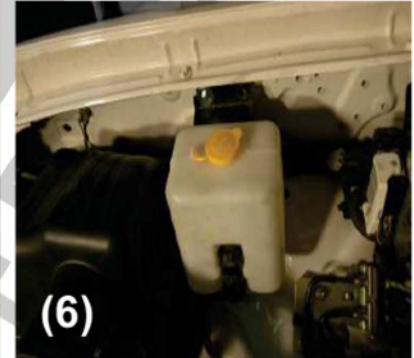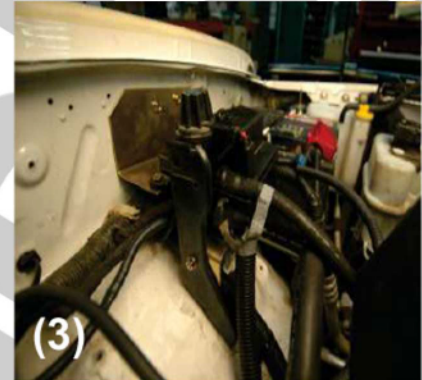

### FITTING INSTRUCTIONS

The cradle fits passenger side rear.

#### PARTS INCLUDED WITH TRAY

- 1 X Tray
- 2 X Fuse Box Mounts
- 7 X M6 Short Hex
- 2 X M6 Long
- 4 X Black Spacer Washers
- 2 X M6 Counter Sunk
- 6 X M6 Nuts
- 2 X M6 Body Washers
- 1 X PS Spacer
- 2 X J Bolts
- 1 X Special Top Mount

#### RECOMMENDED ISOLATOR

**DBE140SF**  
 or  
**DBE180-SX**

- Remove washer bottle & mount.
- Unbolt fuse box & vacuum valves
- Remove Fuse Box Bracket
- Move loom to front of other bracket (1)
- Move Fuse box to in between original battery and bracket
- Bolt bracket closest to motor on fuse box (2)
- Insert bolt to existing bracket with spacer in hole on bracket (3)
- Bolt bracket between fuse box & inner guard & tighten
- Place tray in & Bolt
- Conduit A/C line (20mm) and mount vacuum valves on existing bracket / Cut down. (4)
- Place Battery in tray (5)
- Top mount aligns with bolt on guard (use longer bolt provided)
- Bend Original washer mount to fit drivers side (6)
- Using P.S. Spacer bolt to captive.
- Extend wiring to drivers side
- Re-plumb washer lines to washer bottle using original hose

**Ensure, before closing the bonnet that all items fitted have adequate clearance**