


'Piranha Off Road products are not associated in any way with Nissan Motor Co. (Australia) Pty Ltd or any of its related companies'

To Suit NISSAN PATHFINDER V6 PETROL 1996 Onwards (Twin)

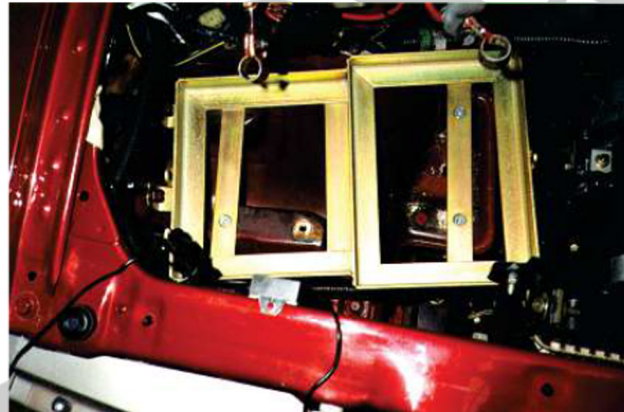

PART NUMBER	BTPF8
APPROX FITTING TIME	2 Hours
MAX BATTERY SIZE	2 x 235mm Long
RECOMMENDED TYPE	Cycle Duty
TRAY LOCATION	DSF



PARTS INCLUDED WITH TRAY

- 1 X Tray
- 3 X M6 Bolts
- 3 X M6 Bolts Countersunk
- 2 X M6 Nut
- 2 X J Bolts
- 1 X Special Top Mount

RECOMMENDED ISOLATOR

DBE140S
or
DBE180-SX

FITTING INSTRUCTIONS

This cradle replaces the existing tray and fits in Drivers side front.

To install the Pathfinder dual battery tray, the original tray and associated brackets have to be removed first. The vertical support arm mounts on the right hand guard, into an original 6 mm tapped hole. The three counter sunk holes pick up off existing tapped holes. Use 6mm counter sunk bolts with spacer washer underneath each hole.

NOTE: When trying to fit the two 8" case batteries, the battery nearest guard will fowl on the top lock panel. You will have to bend the corner of the lock panel to fit the battery case.

Ensure, before closing the bonnet that all items fitted have adequate clearance