


# PIRANHA OFFROAD PRODUCTS P/N BTPRAD03

'Piranha Off Road products are not associated in any way with Toyota Australia or any of its related companies'

To Suit PRADO 120 SERIES  
3.0L TDI



PART NUMBER	BTPRAD03
APPROX FITTING TIME	1 Hour
MAX BATTERY SIZE	300mm L
MAX BATT WEIGHT	23Kg
CYCLE DUTY	
TRAY LOCATION	DSF

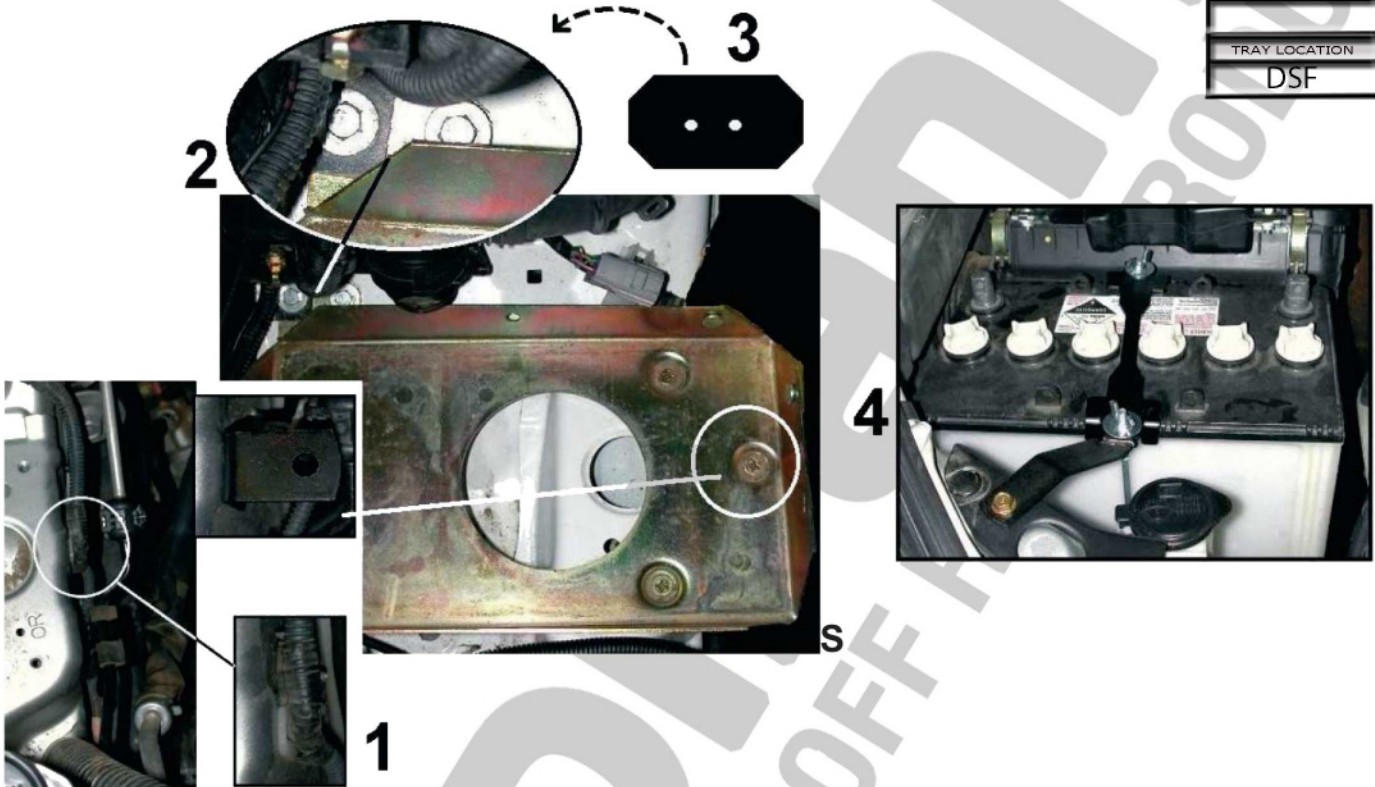

## PARTS INCLUDED WITH TRAY

- 1 X Tray
- 1 X Tray Support Bracket
- 1 X Support plate
- 6X M6 Nut
- 3 X M6 Bolt
- 1 X Special top Mount
- 5 X M6 Bolt Countersunk
- 1 X Washer
- 1 X M6 Long Bolt
- 2 X J Bolt

## RECOMMENDED ISOLATOR

**DBE140SF**  
or  
**DBE180-SX**

## FITTING INSTRUCTIONS

The cradle fits drivers side front.

Unclip wiring loom and bolt in supplied right angle bracket using 1xM6 bolt and nut (Pic 1).  
 Unbolt junction of earth wires from inner guard, discard bolt.  
 Fit the tray in position and using three (3) counter sunk M6 bolts, using long M6 bolt and washer replace earth strap junction together with Battery Tray arm to inner guard.  
 Drill 2xM6 holes through the mount on tray and through the wheel arch. Using 2xM6 nuts and bolts, bolt through the tray mount, the wheel arch and the support plate on the under side of the wheel arch (Pic 2+3).  
 Place battery in position install supplied top mount, drill through the "4" stamped into the metal of the radiator support, DO NOT follow through drilling or you WILL damage the headlight. Secure top mount with M6 bolt (Pic 4)

**Ensure, before closing the bonnet that all items fitted have adequate clearance**